PSA / PSB Series Compact, Digital Display Pressure Sensor

Compact, Digital Display Pressure Sensors

Features

• High brightness red LED (LED height: 9.5mm)

• Min. display interval-Negative pressure: 0.1kPa

-Standard pressure: 0.1kPa, 1kPa -Compound pressure: 0.2kPa

• Convertible pressure unit

- Negative, Compound pressure: kPa, kgf/cm2, bar, psi, mmHg, mmH2O, inHg

- Standard pressure : kPa, kgf/cm², bar, psi

• Various output modes: Hysteresis mode, Automatic sensitivity setting mode, Independent 2 output mode, Window comparative output mode

• Chattering prevention for output

(selectable response time: 2.5ms, 5ms, 100ms, 500ms)

- One-touch connector type for easy wiring and maintenance
- Analog output: voltage (1-5VDC)
- Reverse power polarity and overcurrent protection circuit
- Zero-point adjustment function, peak value monitoring function, bottom hold display







PSB Series Connector type

Ordering Information

Series) 3 Series)
3 Series)
lector output
ector output
е
sure
sure
essure
e (30mm×30mm)
cable type: 10.4mm×54.2mm) connector type: 10mm×52mm)
sor

X1: It is only applied to PSB Series.

■ Pressure And Max. Pressure Display Range

oui o / tila	ax. 1 100	oa. o - .op.	a,ago			
kPa	kgf/cm ²	bar	psi	mmHg	inHg	mmH ₂ O
			0.00 to -14.70 (0.74 to -14.70)			0.0 to -103.3 (5.2 to -103.3)
0.0 to 100.0 (-5.0 to 110.0)				_	_	_
0 to 1000 (-50 to 1100)			0.0 to 145.0 (-7.2 to 159.6)	_	_	_
-100.0 to 100.0 (-101.2 to 110.0)	-1.020 to 1.020 (-1.034 to 1.122)	-1.000 to 1.000 (-1.012 to 1.100)	-14.50 to 14.50 (-14.70 to 15.96)	-750 to 750 (-760 to 824)	-29.5 to 29.5 (-29.8 to 32.6)	-102.0 to 102.0 (-103.4 to 112.2)
	kPa 0.0 to -101.3 (5.0 to -101.3) 0.0 to 100.0 (-5.0 to 110.0) 0 to 1000 (-50 to 1100) -100.0 to 100.0	kPa kgf/cm² 0.0 to -101.3 (5.0 to -101.3) 0.000 to -1.033 (0.051 to -1.033) 0.0 to 100.0 (-5.0 to 110.0) 0.000 to 1.020 (-0.051 to 1.122) 0 to 1000 (-50 to 1100) 0.00 to 10.20 (-0.51 to 11.22) -100.0 to 100.0 -1.020 to 1.020	kPa kgf/cm² bar 0.0 to -101.3 (5.0 to -101.3) 0.000 to -1.033 (0.051 to -1.033) 0.000 to -1.013 (0.05 to -1.013) 0.0 to 100.0 (-5.0 to 110.0) 0.000 to 1.020 (-0.051 to 1.122) 0.000 to 1.000 (-0.050 to 1.000) 0 to 1000 (-50 to 1100) 0.00 to 10.20 (-0.51 to 11.22) 0.00 to 10.00 (-0.50 to 11.00) -100.0 to 100.0 -1.020 to 1.020 -1.000 to 1.000 -1.000 to 1.000	kPa kgf/cm² bar psi 0.0 to -101.3 (5.0 to -101.3) 0.000 to -1.033 (0.051 to -1.033) 0.000 to -1.013 (0.05 to -1.013) 0.00 to -14.70 (0.74 to -14.70) 0.0 to 100.0 (-5.0 to 110.0) 0.000 to 1.020 (-0.051 to 1.122) 0.000 to 1.000 (-0.050 to 1.000) 0.00 to 14.50 (-0.72 to 15.96) 0 to 1000 (-5.0 to 1100) 0.00 to 10.20 (-0.51 to 11.22) 0.00 to 10.00 (-0.50 to 11.00) 0.0 to 145.0 (-7.2 to 159.6) -100.0 to 100.0 -1.020 to 1.020 -1.000 to 1.000 -14.50 to 14.50	kPa kgf/cm² bar psi mmHg 0.0 to -101.3 (5.0 to -101.3) 0.000 to -1.033 (0.051 to -1.033) 0.000 to -1.013 (0.05 to -1.013) 0.00 to -14.70 (0.74 to -14.70) 0 to -760 (38 to -760) 0.0 to 100.0 (-5.0 to 110.0) 0.000 to 1.020 (-0.051 to 1.122) 0.000 to 1.000 (-0.050 to 1.100) 0.00 to 14.50 (-0.72 to 15.96) — 0 to 1000 (-5.0 to 1100) 0.00 to 10.20 (-0.51 to 11.22) 0.00 to 10.00 (-0.50 to 11.00) 0.0 to 145.0 (-7.2 to 159.6) — -100.0 to 100.0 -1.020 to 1.020 -1.000 to 1.000 -14.50 to 14.50 -750 to 750	0.0 to -101.3 (5.0 to -101.3) 0.000 to -1.033 (0.051 to -1.033) 0.000 to -1.013 (0.05 to -1.013) 0.00 to -14.70 (0.05 to -1.013) 0 to -760 (0.74 to -14.70) 0 to -760 (38 to -760) 0.0 to -29.9 (1.5 to -29.9) 0.0 to 100.0 (-5.0 to 110.0) 0.000 to 1.020 (-0.051 to 1.122) 0.000 to 1.000 (-0.050 to 11.00) 0.00 to 14.50 (-0.50 to 11.00) — 0 to 1000 (-5.0 to 1100) 0.00 to 10.20 (-0.51 to 11.22) 0.00 to 10.00 (-0.50 to 11.00) 0.0 to 145.0 (-7.2 to 159.6) — -100.0 to 100.0 -1.020 to 1.020 -1.000 to 1.000 -14.50 to 14.50 -750 to 750 -29.5 to 29.5

X() is Max. pressure display range.

XFor using a unit mmH₂O, multiply display value by 100.

Pressure Conversion Chart

from	Ра	kPa	MPa	kgf/cm ²	mmHg	mmH ₂ O	psi	bar	inHg
1Pa	1	0.001	0.000001	0.000010197	0.007501	0.101972	0.000145038	0.00001	0.0002953
1kPa	1000	1	0.001	0.010197	7.500617	101.971626	0.145038	0.01	0.2953
1MPa	1000000	1000	1	10.197162	7500.61683	101971.626	145.038243	10	295.299875
1kgf/cm ²	98066.5	98.0665	0.098067	1	735.55924	10000.0005	14.223393	0.980665	28.959025
1mmHg	133.322368	0.133322	0.000133	0.001359	1	13.595099	0.019337	0.001333	0.039370
1mmH₂O	9.80665	0.009807	 —	0.000099	0.073556	1	0.00142	0.000098	0.002896
1psi	6894.733	6.89473	0.006895	0.070307	51.714752	703.016716	1	0.068947	2.036014
1bar	100000	100	0.100000	1.019716	750.062	10197.1626	14.503824	1	29.529988
1inHg	3386.388	3.386388	0.003386	0.034532	25.40022	345.315507	0.491156	0.033864	1

E.g.) For calculating 760mmHg as kPa: According to above chart, 1mmHg is 0.133322kPa, therefore 760mmHg will be 760×0.133322kPa=101.32472kPa.

(A) Photoelectric Sensors

(C) Door/Area Sensors

(D) Proximity Sensors

(G) Connectors/ Connector Cables/ Sensor Distribution Boxes/Sockets

(I) SSRs / Power Controllers

(M) Tacho / Speed / Pulse Meters

(N) Display Units

(O) Sensor Controllers

(P) Switching Mode Power Supplies

(Q) Stepper Motors & Drivers & Controllers

(R) Graphic/ Logic Panels

F-17 Autonics


PSA / PSB Series

Specifications


Dragouro tun		Gauge pressure			
Pressure type	е	Negative pressure	Standard pressure		Compound pressure
Model ^{×1}	NPN open collector output	PSA-V01- □ PSB-V01- □ PSB-V01C- □	PSA-01- □ PSB-01- □ PSB-01C- □	PSA-1- □ PSB-1- □ PSB-1C- □	PSA-C01- □ PSB-C01- □ PSB-C01C- □
iviodei	PNP open collector output	PSA-V01P- □ PSB-V01P- □ PSB-V01CP- □	PSA-01P- □ PSB-01P- □ PSB-01CP- □	PSA-1P- □ PSB-1P- □ PSB-1CP- □	PSA-C01P-□ PSB-C01P-□ PSB-C01CP-□
Rated pressu	ire range	0.0 to -101.3kPa	0.0 to 100.0kPa	0.0 to 1,000kPa	-100.0 to 100.0kPa
Display and s	et pressure range	5.0 to -101.3kPa	-5.0 to 110.0kPa	-50 to 1,100kPa	-101.2 to 110.0kPa
Max. pressur	e range	2 times of rated pressure		1.5 times of rated pressure	2 times of rated pressure
Applied fluid		Air, Non-corrosive gas			
Power supply	/	12-24VDC ±10% (ripple P-	-P : Max. 10%)		
Current cons	umption	Max. 50mA			
Control outpu	ut	NPN or PNP open collectors. Load voltage: Max. 30VD		0mA • Residual voltage - NI	PN: Max. 1V, PNP: Max. 2V
Hysteresis	*2	1-digit fixed (2-digit for psi	unit)		2-digit fixed
Repeat err	or	±0.2% F.S. ±1-digit			±0.2% F.S. ±2-digit
Response	time	Selectable 2.5ms, 5ms, 10	00ms, 500ms		
Short circu	it protection	Built-in			
Analog outpu	ıt	Output voltage: 1-5VDC: Linear: Within ±2% F.S.	±2% F.S. • Zero-point: W • Resolution: A	ithin 1VDC ±2% F.S. • Spar oprox. 1/200 • Outp	n: Within 4VDC ±2% F.S. ut impedance: 1kΩ
Display digit		3½ -digit			
Display meth	od	7 segment LED			
Min. display i	nterval	1-digit (psi unit: 2-digit are	fixed)		2-digit
Pressure unit	t	kPa, kgf/cm² , bar, psi, mmHg, mmH₂O, inHg	kPa, kgf/cm², bar, psi		kPa, kgf/cm², bar, psi, mmHg, mmH₂O, inHg
Display accu	racy	0 to 50°C: Max. ±1% F.S.,	-10 to 0°C : Max. ±2% F.S.		
Environment	Ambient temp.	-10 to 50°C, storage: -20 to	0 60°C		
Environment	Ambient humi.	35 to 85%RH, storage: 35			
Vibration		1.5mm amplitude at freque	ency of 10 to 55Hz (for 1 m	in) in each X, Y, Z direction f	or 2 hours
Material		PSA - Front, Rear case: IPSB - Case, Pressure poPSB-C - Case, Pressure	ort, Cover: IXEF	s), Pressure port: die-cast (Zi	n)
Protection str	ructure	IP40 (IEC standard)		<u> </u>	
Cable	Cable type	Ø4mm, 5-wire, 2m (AWG2	24, Core diameter: 0.08mm	, Number of cores: 40, Insula	ation out diameter: Ø1mm)
Cable	Connector type	5-wire, 3m (AWG24, Insula	ation out diameter: Ø1mm)		·
Approval		C€			
Weight ^{*3}		 PSA: Approx. 200g (appr PSB: Approx. 160g (appr 		prox. 160g (approx. 70g)	

^{※1: &#}x27;□' is pressure port type. Please refer to the '■ Ordering Information'.

• Analog output voltage-Pressure characteristic

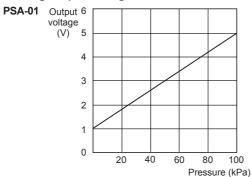

• Analog output voltage-Linear characteristic

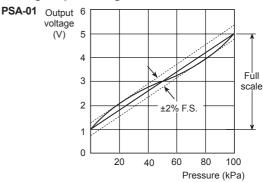

E-18 **Autonics**


X2: In hysteresis output mode, detection difference is variable.

X3: The weight includes packaging. The weight in parenthesis in for unit only.

XF.S.: Rated pressure.

XThe specification of pressure port is marked on the upper part of the case.

^{*}Environment resistance is rated at no freezing or condensation.

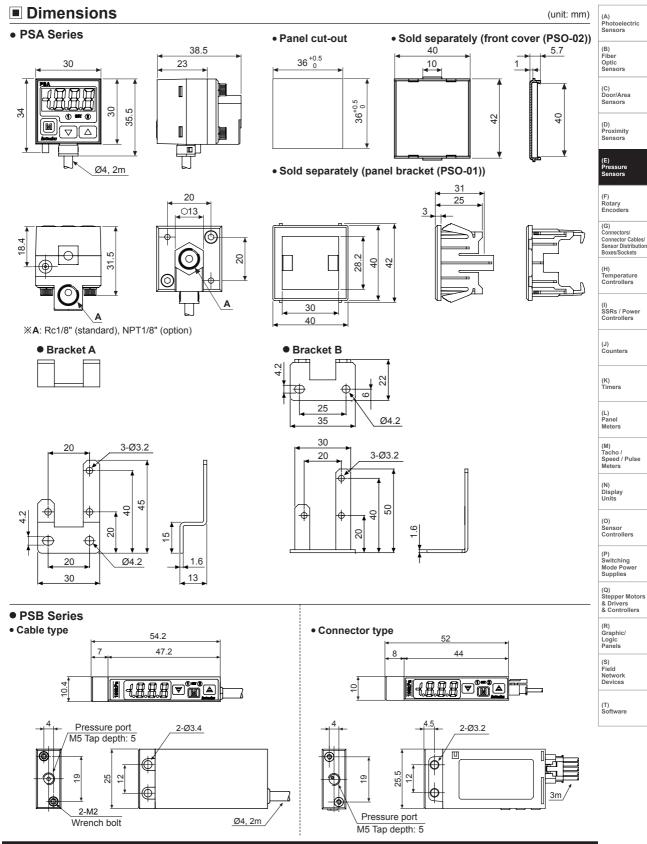


Autonics E-19

Control Output Diagram (PSA/PSB)

• NPN open collector output type


(Brown)+V (Orange)Analog voltage output Load (Black)OUT1 Overcurrent protection (White)OUT2 (Blue)OV

PNP open collector output type

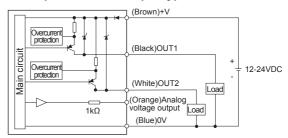

- *There is no short-circuit protection in analog voltage output. Do not connect this output to power supply or capacitive load directly.
- XPlease observe input impedance of connected equipment when use analog voltage output. And be sure to check voltage drop caused by resistance of extended wire.

Unit Description

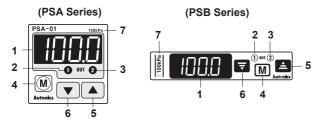

- 1. 31/2 digit LED display (red)
 - : Display sensing pressure, every setting value and display error.
- 2. 1 output indicator (red): Output 1 is ON, LED will be ON.
- 3. 2 output indicator (PSA: red, PSB: green)
 - : Output 2 is ON, LED will be ON.

4. Mode key

: Parameter setting mode or preset setting mode, save setting value.

5. Up key

: Set the setting value to lower step in preset setting or pressure unit, output mode, response time, analog output scale, key lock, peak hold value, bottom hold value display in parameter setting.


6. Down key

: Set setting value to upper step in preset setting or pressure unit, output mode, response time, analog output scale, key lock, peak hold, bottom hold display in parameter setting.


7. Range of rated pressure

: It is possible to change the pressure unit in PSA Series. Please use different unit as label for your application.

Setting (PSA/PSB)

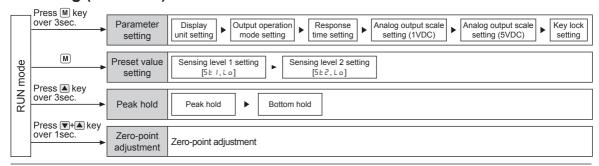

■ Zero Point Adjustment (PSA/PSB)

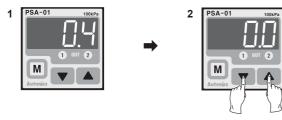


- In state of atmospheric pressure during RUN mode, press ▼ key and ▲ key at the same time for over 1sec.
- When the zero point adjustment is completed, it will display @@ and return to RUN mode automatically.
 Please execute zero point adjustment regularly.



※If executing zero point adjustment when external pressure has been applied, Er I will be flashing. Please execute zero point again in state of atmospheric pressure.

Parameter Setting (PSA/PSB)

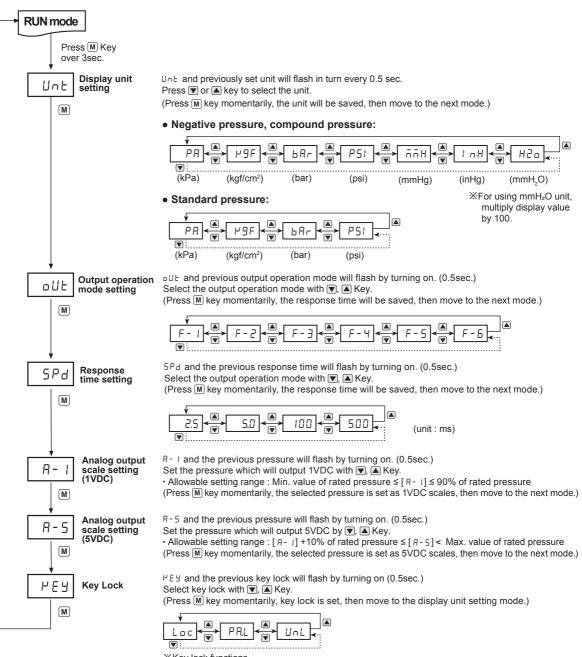

※Key lock functions

- L o C : Disable to change preset value and parameter value (Enable to change PEY mode only)
- PRL: Disable to change parameter setting/preset, zero point adjustment (Enable to check peak hold and bottom hold, and to change PEY mode)
- ปกุ L : Enable to change preset value and parameter value (Lock off)

(A) Photoelectric Sensors

(C) Door/Area Sensors

(D) Proximity Sensors

Rotary Encode

Connectors/ Connector Cables/ Sensor Distribution Boxes/Sockets

(I) SSRs / Power Controllers

(J) Counters

(N) Display Units

(O) Sensor Controllers

(P) Switching Mode Power Supplies

(Q) Stepper Motors

Logic Panels

F-21 Autonics

^{*}When advance to parameter setting mode and preset setting mode, it displays "Setting item" and "Previous setting value" by 0.5 sec. turn. This display will stop by pressing volume, if any key is untouched for over 1 sec., it will display old value by 0.5sec, turn again.

[₩]When M key is pressed for 3sec. during setting, it will return to RUN mode with memorizing on EEPROM. However, when there is any

key is untouched for 60sec., it turns to RUN mode with keeping the previous setting value not current setting value.

^{**}There is memory protection by EEPROM, but life cycle of EEPROM is 100,000 times.

Preset Value Setting (PSA/PSB)

⊕ Hysteresis mode[F-1] and independent 2 output mode[F-3,F-4,F-5]













5 ! and previously set value will flash in turn every 0.5 sec.



Press ▼ or ▲ Kev to select 5 + 1 setting

5 t 2 and previously set value will flash in turn every 0.5 sec.



Press ▼ or ▲ Kev to select 5 £ 2 setting value

※5₺ / setting range : Min. display pressure < 5₺ / ≤ Max. display pressure
</p> ※5₺2 setting range: - Hysteresis mode: Min. display pressure ≤ 5₺2 < 5₺ /

</p>

- 2 independent output mode: Min. display pressure < 5 t ≥ ≤ Max. display pressure
















5 t and previously set value will flash in turn every 0.5 sec

After applying 5 ± 1 into

then press

▲ Key.



After applying

Pressure port,

5 £ 2 into

▲ Key.

than press

5EL and previously set value will flash in turn every 0.5 sec.



Sensitivity will be automati-Press ▼ or ▲ key to fineadjust the setting value between 5t 1 and 5t2

5t 1+5t2

※5₺2 setting range: 5₺ / + 1% of rated pressure <5₺2 ≤ Max. display pressure
</p>

Adjustable range of set value: Between 5£ 1 and 5£2.

○ Window comparison output mode[F-6]













HI and previously set value will flash in turn every 0.5 sec.



Press ▼ or ▲ Key to select HI setting value.



If no key is touched for 60sec., it will return to RUN mode. [Automatic sensitivity setting mode[F - 2] is exception]

value.

- When changing the display unit, preset value will be calculated according to the display unit.
- Whenever key touched one time, it is increased (decreased) as 1 digit (2 digits for psi unit and compound pressure) but it will be continuously increasing (decreasing) by pressing ▼, ▲ key constantly.

Press or Key

to select Lo setting

Peak Hold And Bottom Hold Check

- 1. Press kev for over 3sec. in RUN mode.
- 2. PEH and memorized max. pressure (Negative pressure type is for max. negative pressure) will flash by turning on (0.5sec.) then display peak hold value.
- 3. baH and memorized min. pressure (Negative pressure type is for min. negative pressure) will flash by turning on (0.5sec.) then display bottom hold value.
- 4. If pressing A key one time shortly, memorized peak hold and bottom hold value will be removed then return to RUN mode.
- *When the peak hold and bottom hold value is over the max. display pressure value, it displays HHH, On the opposite, it displays LLL. Please remove peak hold and bottom hold value by using A key.

Output Operation Mode (PSA/PSB)

1. Hysteresis mode [F-1]


※It can be set for pressure sensing level[5½ ½] and sensing difference[5½ ⅔].

X5E I setting range

: Min. display pressure < 5 Ł / ≤ Max. display pressure


5 £ 2 setting range

- : Min. display pressure ≤ 5 ± 2 < 5 ± 1
- OUT 1: When applying pressure is larger than 5£ 1, it wil be ON.
- OUT 2: When applying pressure is lower than 5 £ 2, it will be ON.

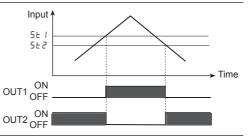

2. Automatic sensitivity setting mode [F-2]

- **This function is to set pressure sensing level to the proper position automatically, it is set by received pressure from two positions [5£ 1, 5£2].
- **The sensing hysteresis fixed to 1 digit (2 digits for psi unit and compound type)
- **The pressure sensing level [5££] is shown in the following calculation. $5££ = \frac{(5££+5£2)}{2}$
- OUT 1: When applying pressure is larger than 5EŁ value, it will be ON.
- OUT 2: When applying pressure is between 5₺ 1 and 5₺ ², it will be ON.

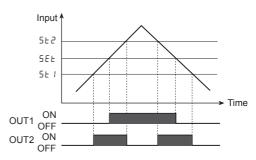

Note1) If it is not enough for difference of sensing level between 5£ 1 and 5£2, £r3 will be displayed. Please set again after applying enough pressure.

Note2) $5 \not\in I$ setting range: Min. display pressure $\le 5 \not\in I$ \le Max. display pressure -1% of rated pressure $5 \not\in Z$ setting range: $5 \not\in I$ +1% of rated pressure $\le 5 \not\in Z$ \le Max. display pressure


Note3) If fine adjustment for sensing level is required, adjust sensing level by , ▲ key. (Adjustment range: Between 5 ≥ 1 and 5 ≥ 2)

3. Independent 2 output mode [F-3, F-4, F-5]

※5Ł I and 5Ł 2 can be set independently within display pressure range. One is for control, the other is for alarm or optional control.

**The sensing hysteresis fixed to 1 digit (2 digits for psi unit and compound type)

- : Min. display pressure ≤ 5 ₺ । ≤ Max. display pressure 5 ₺ 2 setting range
- : Min. display pressure $\leq 5 \, \text{E} \, \text{2} \, \leq \text{Max}$. display pressure
- Independent 2 output mode [F ∃]
- OUT 1: It will be ON, when it is over 5£ 1.
- OUT 2: It will be ON, when it is over 5 t 2.
- Independent 2 opposite mode [F 4]
- OUT 1: It will be OFF when it is over 5 t.
- OUT 2 : It will be OFF, when it is over $5 \, \text{L} \, \text{2}$.
- Independent 2 cross mode [F 5]
- OUT 1: It will be OFF when it is under 56 1.
- OUT 2 : It will be ON, when it is under 5 ₺ 2 .

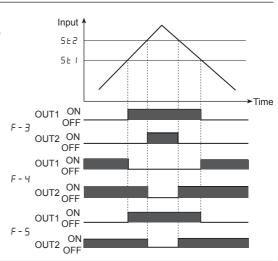


4. Window comparison output mode [F-6]

※It is able to set High limit value [HI], Low limit value [L□] of pressure sensing level in this mode.

**The sensing hysteresis fixed to 1 digit (psi unit and compound type 2 digits)

- : Min. display pressure ≤ L □ < Max. display pressure

 HI setting range : L □ ≤ HI < Max. display pressure
- OUT 1 : It will be ON between high limit value[HI] and low limit value[L σ]
- OUT 2 :It will be ON when it is over high limit value[HI] and low limit value[L \Box].

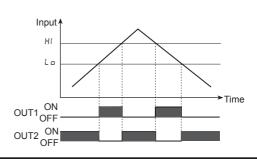

(A) Photoelectric

(B) Fiber Optic

> (C) Door/Area Sensors

> (D) Proximity Sensors

(E) Pressure Sensors

(F) Rotary Encoders

(G) Connectors/ Connector Cables/ Sensor Distribution Boxes/Sockets

(H) Temperature Controllers

(I) SSRs / Power Controllers

(J) Counters

> (K) Timers

(L) Panel Meters

(M) Tacho / Speed / Pulse

(N) Display Units

(O) Sensor Controllers

(P) Switching Mode Power Supplies

(Q) Stepper Motors & Drivers & Controllers

(R) Graphic/ Logic Panels

(S) Field Network Devices

(T) Software

Autonics E-23

Functions (PSA/PSB)

O Pressure unit change

PS□-V01 (C) (P)/PS□-C01 (C) (P) has 7 kinds of pressure unit and PS□-01 (C) (P)/PS□-1 (C) (P) has 4 kinds of pressure unit.

Please select the proper unit for application.

- PS□-V01 (C) (P), PS□-C01 (C) (P) : kPa, kgf/cm², bar, psi, mmHg, inHg, mmH₂O

Output mode change

There are 6 kinds of control output modes in order to provide the various detection. Select a mode for your proper application.

• Hysteresis mode [F-1]

When variable hysteresis is required for pressure detection.

• Automatic sensitivity setting mode [F-2]

When it is required to set detecting sensitivity automatically at proper position.

• Independent 2 output mode [F-3, F-4, F-5] When it is required to detect pressure from two positions.

When it is required to detect pressure from two position with one product.

• Window comparison output mode [F-6]

When is required to detect pressure in a certain range.

Response time change (chattering prevention)

It can prevent chattering of control output by changing response time. It is able to set 4 kinds of response time (2.5, 5, 100, 500ms) and if the response is getting longer, the sensing will be more stable by increasing the number of digital filter.

Analog output scale setting

It is not fixed the analog output (1-5VDC) scale as the rated pressure range but this is a function to change properly for user's application. When the position[R - I] for 1VDC output and the position [R - S] for 5VDC output are set, the pressure range of R - I to R - S is to 1-5VDC analog output.

Key lock

This unit has 2 kinds of key lock function in order to prevent wrong operation.

- L _ [: All keys are locked, it is impossible to change any parameter setting/preset, zero point adjustment, peak hold and bottom hold. (Enable to change # 5 mode only).
- PRL: It is impossible to change parameter setting/preset, zero point adjustment. (Enable to check peak hold and bottom hold, and to change PEY mode).
- ปกL: All keys are unlocked.

Zero-point adjustment

This function is to set the display value of pressure at zero when port is opened to atmospheric pressure.

Peak hold and bottom hold


This function is diagnosis malfunction of the system caused by parasitic pressure or to check through memorizing the max./min. pressure that occurred in the system.

© Error display


Error display	Description	Troubleshooting
Erl	When external pressure is input while adjusting zero point	Try again after removing external pressure
Er2	When overload is applied on control output	Remove overload
Er3	When the setting value is not matched with setting condition	Check setting conditions and set proper setting values
ннн	When applied pressure exceeds High-limit of display pressure range	Apply pressure within
LLL	When applied pressure exceeds Low-limit of display pressure range	display pressure range

Installation (PSA Series)


- When installing pressure port, it is able to bring pressure from 3 directions by changing the mounting direction of the pressure port.
- Basic spec of pressure port is Rc (PT) 1/8"and option pressure port is NPT1/8". Use general one-touch fitting.



- 3. Please use seal tape at port plug in order to prevent pressure leak.
- Please block another two pressure ports not used with port plug.

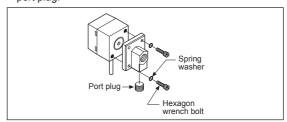

Please connect it by using spanner (13mm) at the metal part in order not to overload on the body when connecting one touch fitting.




∧Caution

The tightening torque of one touch fitting should be max. 10N·m. If not, it may cause mechanical problem.

F-24


- PSA Series has 2 kinds of brackets so it is able to install it in two different ways.
- At first, please unscrew hexagon wrench bolt and assemble the bracket on this unit by fixing the hexagon wrench bolt.

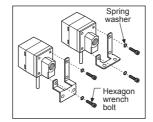

⚠ Caution


In this case, tightening torque of hexagon wrench should be max. $3N\cdot m$. If not, it may cause mechanical problem.

8. Bracket (PSO-01) and front protection cover (PSO-02) are sold separately. Please see the pictures for installation.




Installation (PSB Series)


1. Pressure port is M5. Use general one touch fitting.



It is able to use it without the pressure port according to environment. In this case O-Ring between pressure port and its body should not be taken out in order to prevent pressure leak.



Please connect it by using spanner (10mm) at pressure port in order not to overload on the body when connecting one touch fitting.



⚠Caution


The tightening torque of one touch fitting and hexagon wrench should be Max. 5N·m and 2N·m. It may cause mechanical trouble. Please do not use spanner to install as it may cause mechanical trouble.

Proper Usage

∴ Caution

PSA, PSB Series is for sensing of non corrosive gas. Do not use this product at corrosive gas or flammable gas, etc.

- Please using this unit within the range of specification, if applying pressure is larger than specification, it may not be working properly due to damage.
- · After supplying power, it takes 3 sec. to work.
- When using switching mode power supply, frame ground (F.G.) terminal of power supply should be grounded.

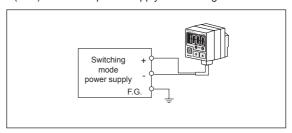

- It may cause malfunction by noise, when wiring with power line or high voltage line.
- Do not insert any sharp or pointed object into pressure port. It may cause mechanical problem due to sensor damage.
- Do not use this unit with flammable gas, because this is not an explosion proof structure.
- Be sure that this unit should not be contacted directly with water, oil, thinner, etc.



• Wiring must be done with power off.

Accessory

PSA/PSB

Pressure unit label

±100kPa ±101.3kPa 100kPa 1MPa					
±1.020kgflari	gficn* -1.034kgficn* 1.020kgficn* 10.20kgficn*				
±14.50psi	-14.70psi	14.50psi	145.0psi		
±1.000bar	-1.013bar	1.000bar	10.00bar		
±750mhg -760mhg ×10 ×10					
±29.5inHg	-29.9inHg	×100	×100		
±102.0mH ₂ O -103.4mH ₂ O ×1000 ×1000					
DISPLAY UNIT LABEL					

Only for PSA Series

· Port plug

Bracket A



Bracket B



(A) Photoelectric Sensors

(B) Fiber Optic

> (C) Door/Area Sensors

(D) Proximity Sensors

(E) Pressure Sensors

(F) Rotary

(G) Connectors/ Connector Cables/ Sensor Distribution Boxes/Sockets

(H) Temperature Controllers

(I) SSRs / Power Controllers

(J) Counters

> ۲) imers

> _) anel

(M) Tacho / Speed / Pulse

(N) Display Units

(O) Sensor Controllers

(P) Switching Mode Power Supplies

(Q) Stepper Motors & Drivers & Controllers

(R) Graphic/ Logic Panels

(S) Field Network Devices

(T) Software

Autonics E-25